


PTC Heater

Model: ER887

INSTRUCTION MANUAL

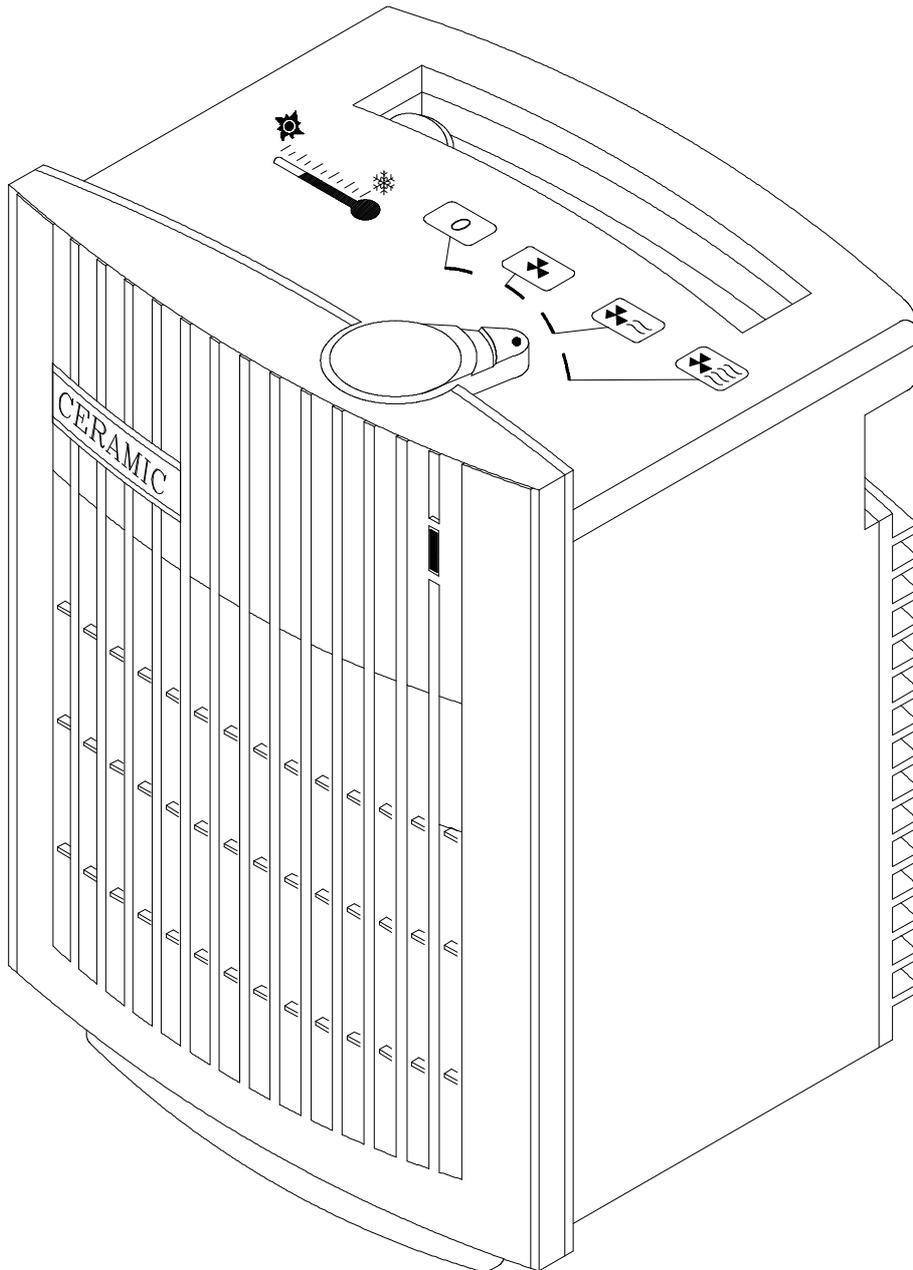

Contents

Thank you very much for purchasing our Heater.

Safety Precautions & Important Safeguards	2-3
Features	4
Specifications	4
Remove Packing	4
Installation precautions	4
Unit Layout	5
Heater for Bathroom Area	5
Operation	6
Cleaning	6
Storage	6
Warning	6
Check the Heater before Repairing	7
Recycling	7

KEEP THESE INSTRUCTIONS

Safety precautions & Important Safeguards:



Please read all the instructions before using this heater.

- Don't do any modification to the Heater.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the Heater in outdoors.
- This Heater is intended for use in bathrooms, laundry areas or similar indoor locations. Never put the heater where it may fall into a bathtub or other water container.
- Do not use the Heater in the immediate surroundings of a bath, a shower or a swimming pool.
- The Heater must not be located immediate below a socket outlet.
- This Heater has hot and arcing or sparking parts inside. Please do not place combustible or chemical items near the Heater.
-  **WARNING:** In order to avoid overheating, do not cover the heater.
- This Heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms. When they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

- Connect the Heater to properly grounded outlets only.
- To avoid over-heating since a fire risk exists, do not cover the Heater.
- To avoid burns, do not touch the hot surfaces of the heater when it is in use.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the Heater.
- Always unplug the Heater when not in use. To disconnect the Heater, remove the plug from the outlet.
- Never use a damaged cord or plug. If the supply cord is damaged, must be replaced by the manufacturer, an affiliate agent or a qualified person in order to avoid hazard.
- Using an extension cord is not recommended as it may overheat and cause a risk of fire. However, if an extension cord has to be used, the conductor wire inside the cord must be at least **1mm** in diameter and rate not less than **10Amp**.
- Do not run cord under carpet and do not cover cord with throw rugs, runners, or the like. Place the cord away from traffic area and where it will not be tripped over.
- Use this Heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Only qualified service representative should perform repairing and maintenance services.
- If you are away for several hours, consider reducing the temperature setting.
- If you have several appliances in one room, let them operate simultaneously. In doing so you will obtain a more uniform temperature without increasing your electricity consumption.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- **CAUTION:** In order to avoid hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Only qualified service representative should perform repairing and maintenance services.

Specifications:

Model	ER887
Voltage Rating	230V AC, 50Hz
Power Consumption (W)	800W / 1500W
Unit Size (cm)	15.5cm(W) x 12cm(D) x 21cm(H)
Unit Weight (kg)	1.6 kg

Features:

- Multiple Powers Control
- Fan “Cold air”
- Temperature Control
- Power Switch & Indicator Light
- Safety Tip-Over switch
- No oil-leakage
- Anti-Frost function

Remove Packaging:

1. Take out the Heater from the gift box.
2. Remove the polyfoams and polybags.
3. Save the packaging to store the Heater while it is not being used.





Keep the original box! It can be used for storage in summer season.


Installation Precautions:

- Switch Off the power before installing Plug to electrical outlet.
- **CAUTION:** Must have a safety ground.
- Keep combustible materials, such as drapery and other furnishings at least 1 meter from the front of the heater and away from the side.


Unit Layout:

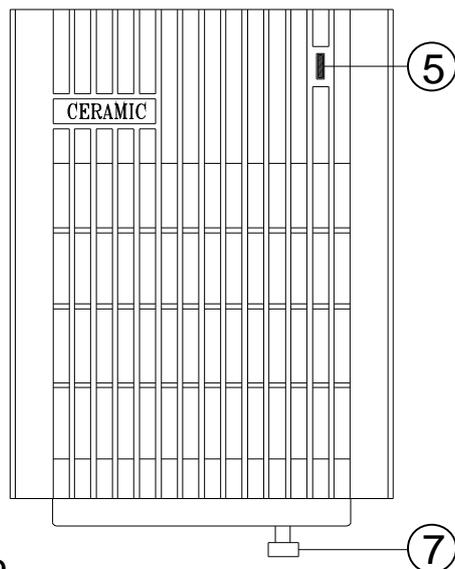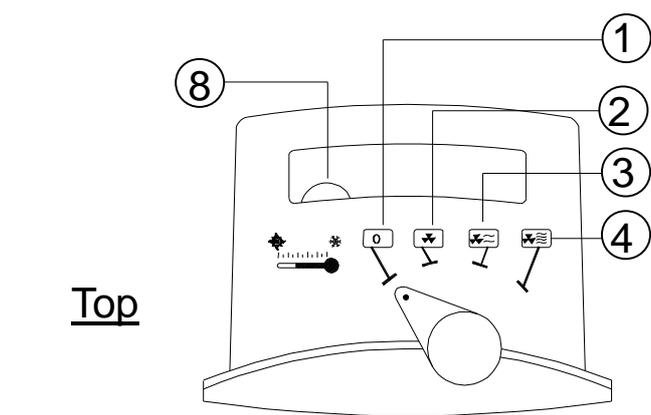

Front

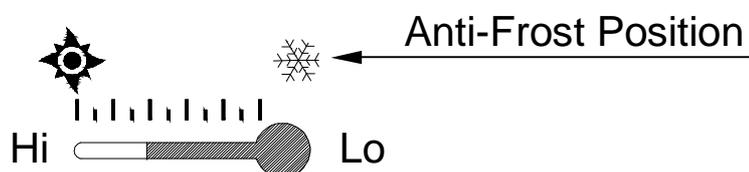


1. Power Off
2. Fan Only “  ”
3. Power 1 “  ” (800W)
4. Power 2 “  ” (1,500W)
5. Power Indicator
6. Filter
7. Tip-Over Safety switch
8. Temperature Control Knob

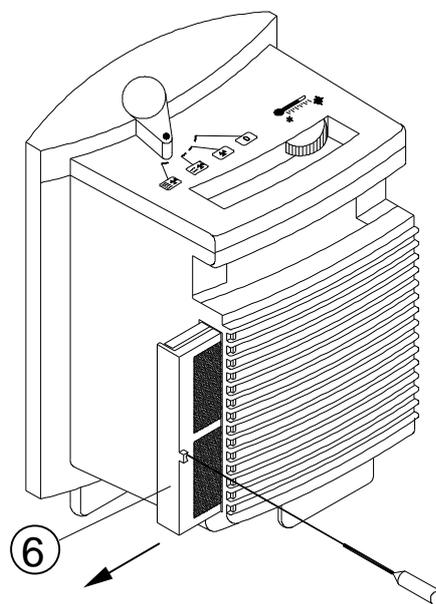

Rear

Heater for Bathroom Area:

We recommend to install the heater in the bathroom area at least 0.6m away from shower OR bathtub as shown in the picture (volume 3). The figure 0.6m is a suggested distance; the actual distance from the shower and bathtub should follow national standard in each country.

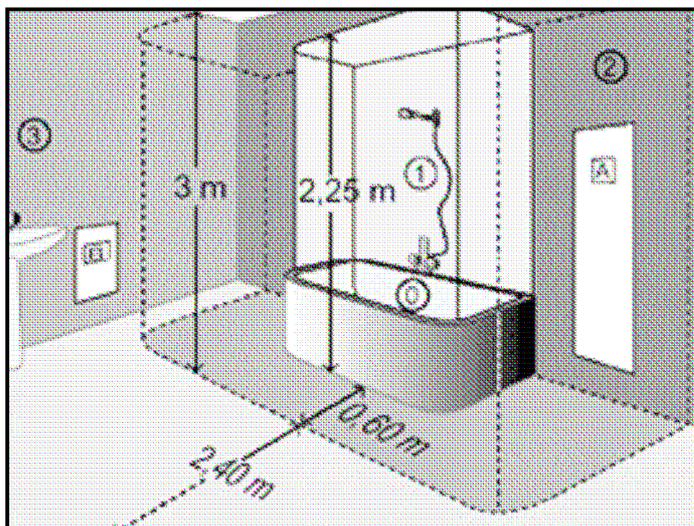

Operation:

1. Make sure the power switch is at “**OFF**” position. Plug the power cord into a suitable electrical outlet and rate not less than **10Amp**.
2. Turn the power switch to either “  ” or “  ” position for different heating power level; or Fan only “  ” position.
3. According to the personal needs, you can adjust the temperature control knob to increase or decrease the room temperature in a clock-wise or anti-clockwise direction.
4. When the room temperature reaches the pre-set temperature the power will cut off. The heating indicator light will turn ON as the time. The power resumes when room temperature drops at least 3°C lower than the pre-set temperature.
5. Anti-Frost function it will keep the surrounding temperature above “Freezing Point”. To do this, simply plug the power cord and turn the temperature control knob to “Snowflake” position, fear of pipe breakage by ice is evitable.

Cleaning:

1. Please turn off the heater, unplug the power cord and allow the heater to cool down before cleaning.
2. Do not immerse the power cord and plug or the heater into water or other liquid. Do not pour water or other liquid over the heater.
3. Use a vacuum cleaner to remove dust and lint from the metal grid of the heater.
4. Wipe the heater with a dry cloth to remove dust and a damp cloth (not wet) to clean the stains.
5. Do not use detergents, abrasive cleaning powder or polish of any kind on the body of the heater, as these can damage the finish.

Storage:

Store the heater in a cool dry place when not in use. To prevent dust and dirt getting into the heater, use the original box to repack the unit.

WARNING:

- Please do not attempt to repair the heater, as it is potentially hazardous and will void the heater’s warranty. Only authorized personnel may repair the heater.
- Plastic bags are not toys. Keep them away from infants and children as they represent risk of suffocation and other hazards.
- **CAUTION:** Must have a safety ground.

Check the heater before repairing:


Heater not Warm or not Operating:

1. Check if the electrical supply in the house or the main fuse is working or not?
2. Check if the power cord is plugged into an electrical outlet or not?
3. Check if the heater is switch on or not?
4. Check if the room temperature is under thermostat setting temperature or not?
5. Check if any objects are covering the unit or not?

If the heater is still not operation after these checking, please contact the manufacturer service agent. All repairs must be referred to authorized personnel from authorized retailer.

Important: Any tampering with the appliance will invalidate the warranty. Repairs carried out improperly and by unqualified persons may have serious consequences for the user.

Recycling:

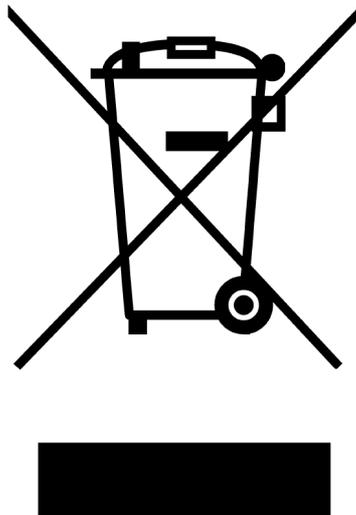

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

KEEP THESE INSTRUCTIONS